

Cosmetic Box Installation Instructions

1. Position unit flush against the wall at desired height. Mark screw holes.
2. Attach the back of the cabinet to the wall with the screws provided. See Fig. 1.

Caution: If unable to screw into studs, use toggle bolts or other suitable fasteners.

3. Assemble door pulls to door as follows:

Step 1: Place door on flat surface with the mirror side or plastic side up.

Step 2: Remove the paper back from the pull and press in place as shown in Fig. 2.

4. Install sliding doors in cabinet by lifting into upper channel and dropping them down into lower channel.

Note: Insert right hand door in rear channel first.

5. Peel protective coating from the decorative frame on the product when provided.

Fig. 1

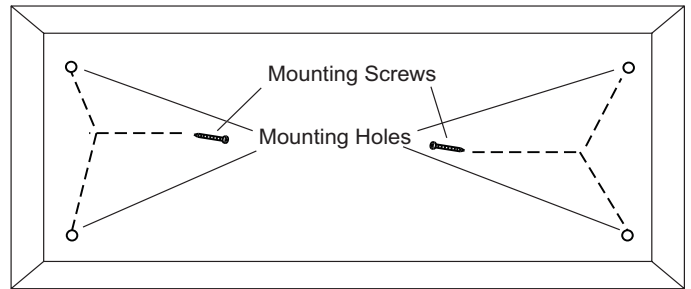


Fig. 2

